




PROJETOR NEC

Instalação por cabo de Ethernet
Setor de Suporte e Manutenção de Equipamentos



Julho/2018



1. Faça o download do programa “MultiPresenter”: https://www.nec-display.com/dl/en/pj_soft/ieu_l.html

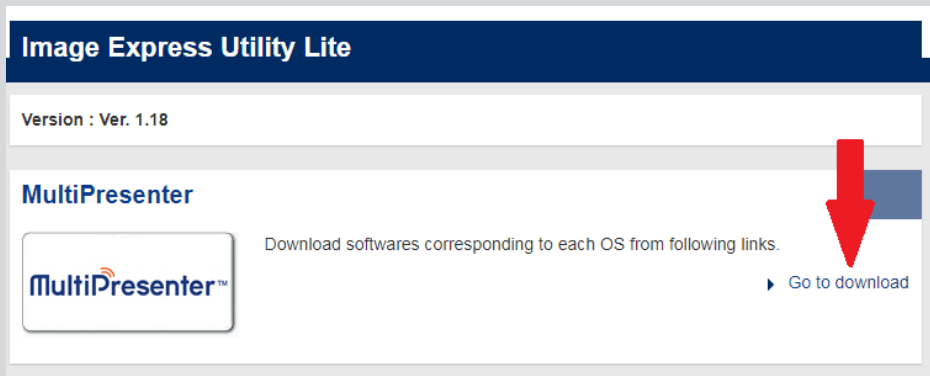

2. Escolha seu sistema operacional

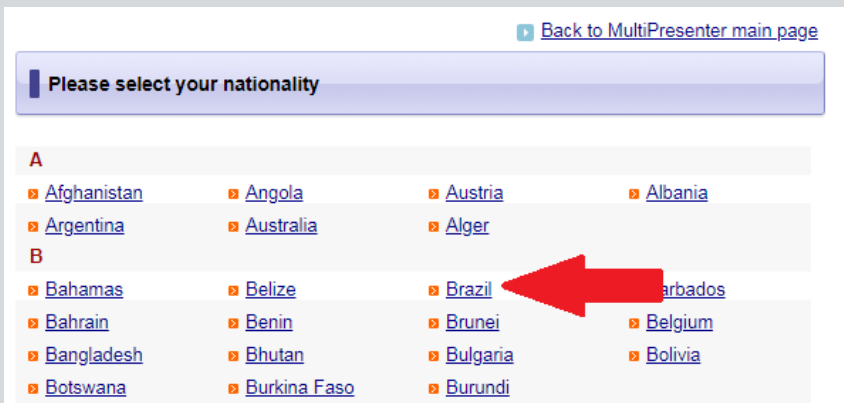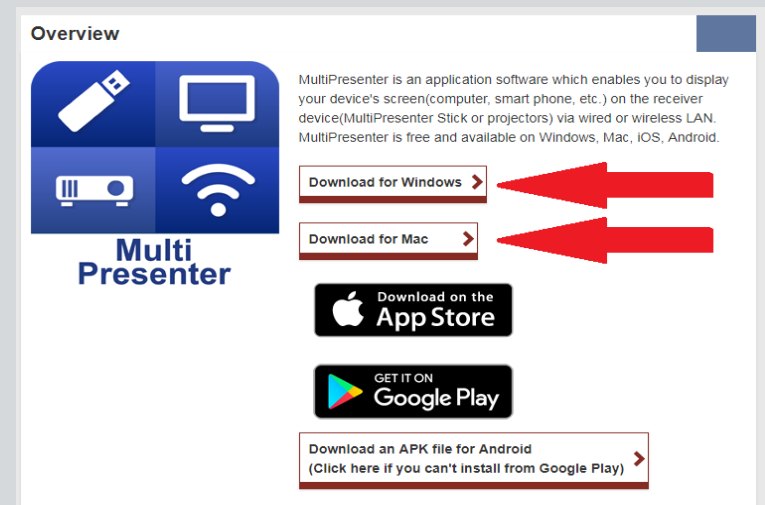




3. Escolha seu país

4. Aceite os termos de uso (no fim da página)



6. Escolha o instalador. Após o download, abra-o.

7. Siga os passos de instalação

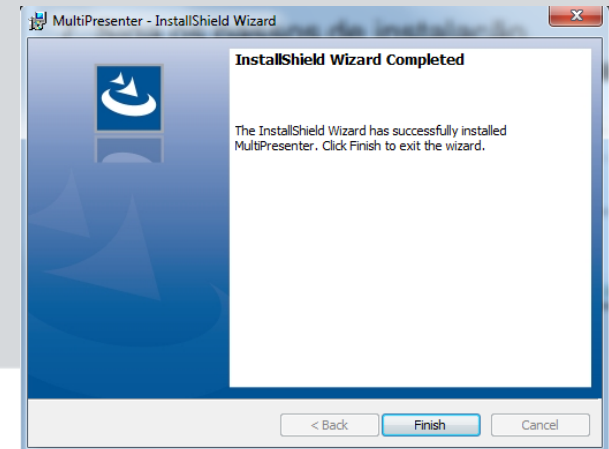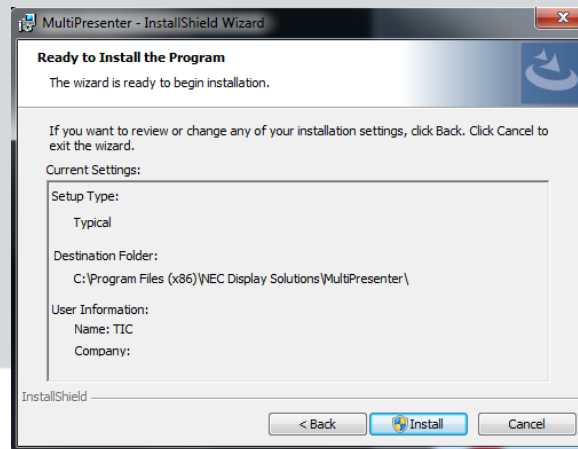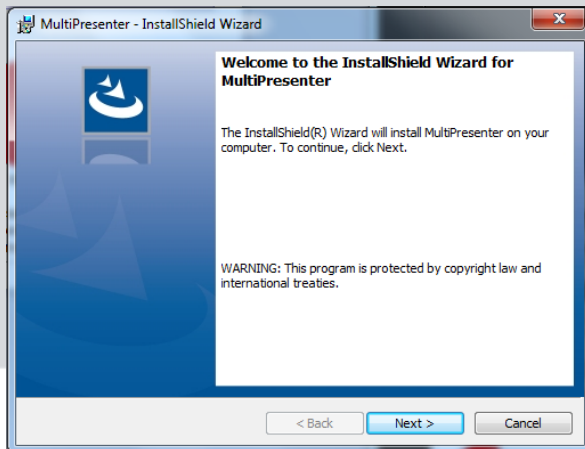


Others



1. The validity, interpretation, construction and performance of EULA shall be governed by the laws of Japan.
2. User shall not export the Software, all the related documentation and all copies thereof to any country to which such export would be prohibited by any applicable laws.
3. Disputes over the EULA are to be resolved at the Tokyo District Court as the exclusively agreed competent court.

[[YES](#)] [[NO](#)]

5. Aceite novamente

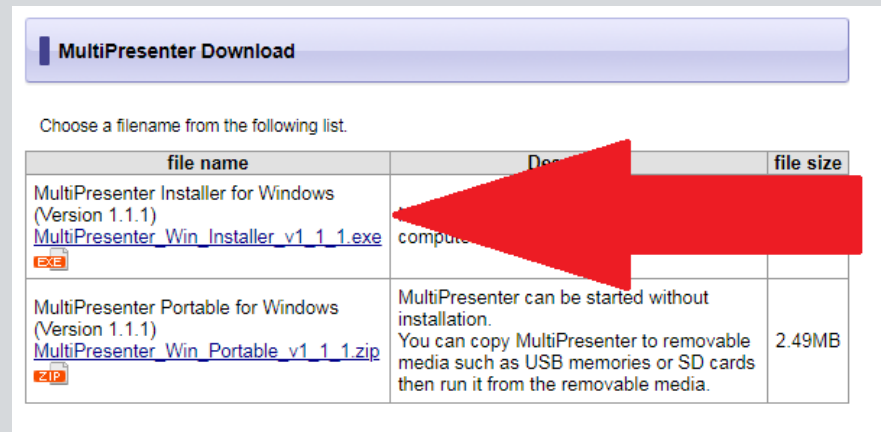

8. Ligue o projetor
9. Conecte o cabo de rede ao computador
10. Abra o programa “MultiPresenter”. Clique na aba “Conexão” e em “Selecionar”

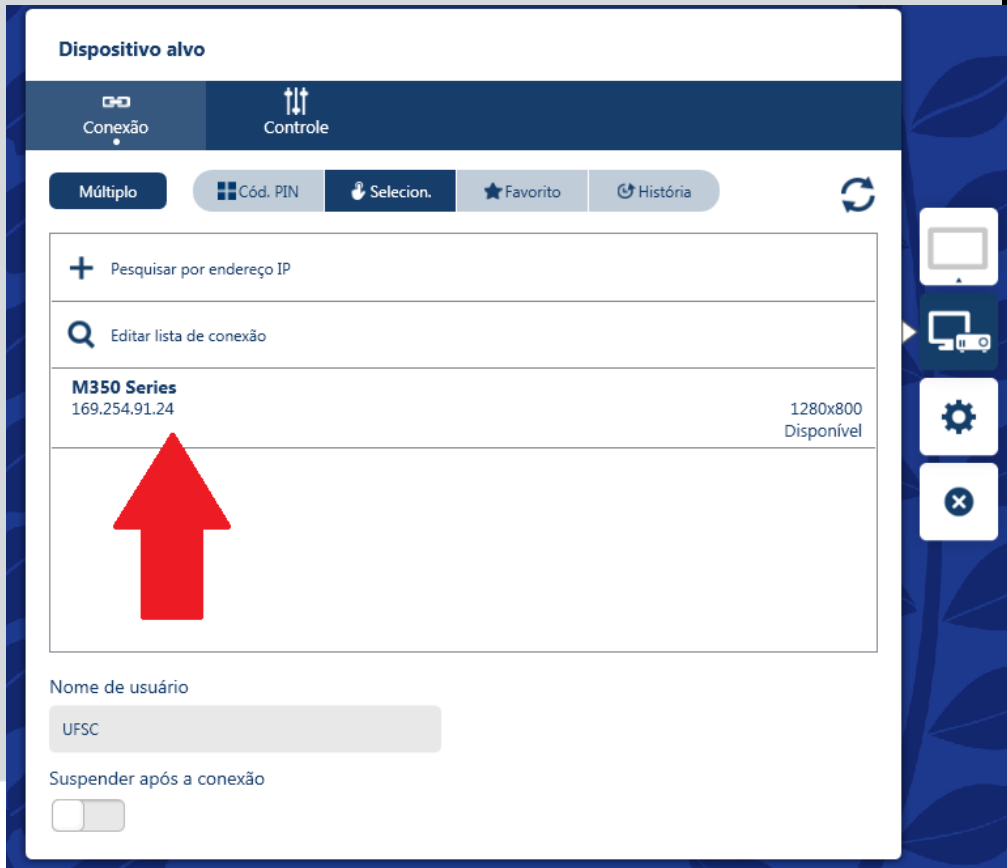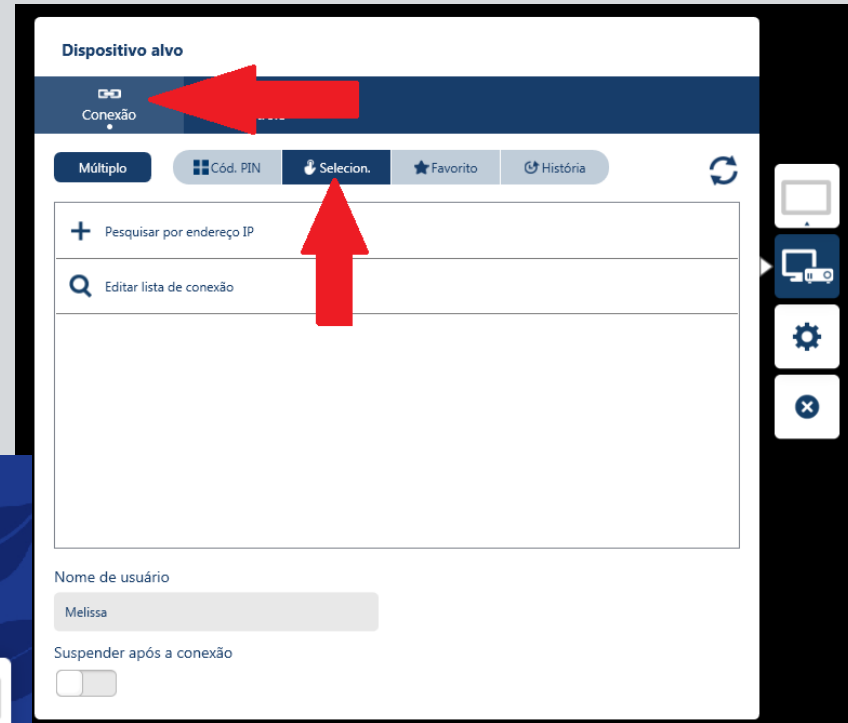

11. O nome do seu projetor vai aparecer. Clique em “Ligar”